



Nerf N-Strike Maverick Chamber Replacement

This guide will help you figure out what steps you need to take in order to replace the chamber of your Nerf gun.

Written By: Sam Preston



INTRODUCTION

Once you have gotten to step 7 of the [tear down guide](#) you're ready to replace the chamber of the gun.



PARTS:


- [A replacement chamber](#) (1)
-

Step 1 — Releasing the Chamber



- Use your fingers to grasp the orange circle piece that's in direct contact with a small device protruding from the chamber of the gun, and slide the circle towards the trigger.
- Move the chamber slightly so that the orange piece no longer connects to the chamber.

Step 2

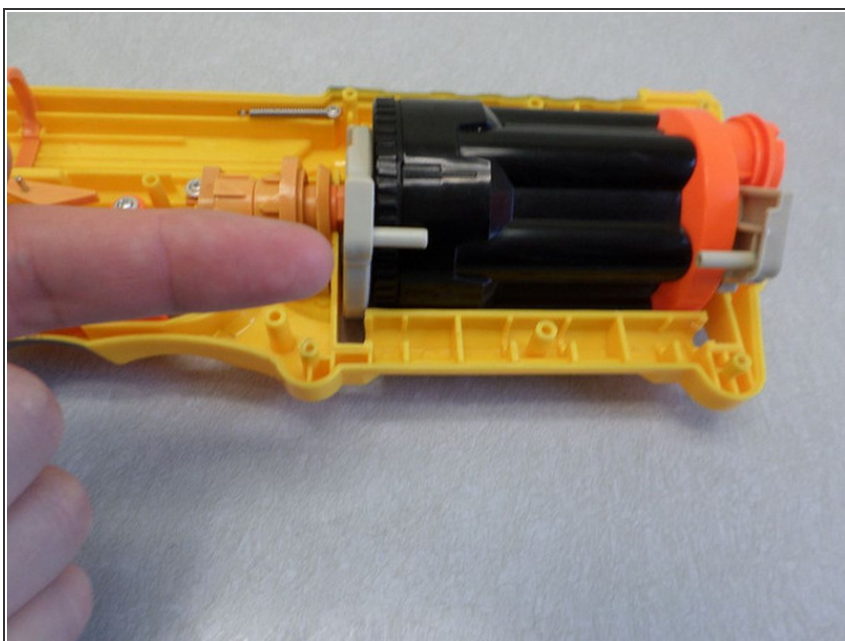

- Release the two tan sticks from the holes that they are placed by sliding them upwards.

Step 3



- Once you have released the tan sticks, and pulled back on the orange circle, the tension should release the chamber making it easily removable.

Step 4 — Reverse the Process



- To reassemble your device, follow these instructions in reverse order.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 07:08:15 AM.